

# Veneto

## Adjustment instructions



### Seat height adjustment

Whilst seated locate the adjustment lever underneath the seat (RHS). Lift the lever and the seat will lower. To raise the seat, lift the same lever whilst taking your weight off the seat.



### Armrest position adjustment

To raise or lower the armrest depress the button underneath the armrest pad. To adjust the pad position slide it forward/backward or twist left/right.



### Lumbar support adjustment

Whilst seated simply slide the lumbar support up or down to the desired position.



### Backrest angle lock adjustment

Whilst seated locate the adjustment lever underneath the seat (RHS). To lock the backrest position, push the lever sideways into the seat. To unlock, pull the lever out.

